

Application	Content	
<b>Standards Manager</b>	<ul style="list-style-type: none"> <li>▪ Creating New Standards</li> <li>▪ File Locations and Drawing Management</li> <li>▪ Relationship with the Drawing Manager</li> </ul>	<ul style="list-style-type: none"> <li>▪ Filtering Specifications</li> <li>▪ Multiple Block Locations</li> <li>▪ Layers and the AutoCAD Layer Manager</li> <li>▪ Importing and Exporting Standards</li> </ul>
<b>Spec Generator</b>	<ul style="list-style-type: none"> <li>▪ Creating New Specs</li> <li>▪ General Parameters and Interconnection to Drafting applications and BOMs</li> <li>▪ Importing and Export Specs</li> </ul>	<ul style="list-style-type: none"> <li>▪ Customizing Material Information</li> <li>▪ Customized Rating Display</li> <li>▪ Branch Fittings Table</li> <li>▪ Wall Thickness Table</li> </ul>
<b>BOM Settings Manager</b>	<ul style="list-style-type: none"> <li>▪ Updating data columns</li> <li>▪ Changing groups of components</li> </ul>	<ul style="list-style-type: none"> <li>▪ Changing numbering</li> <li>▪ Sorting options</li> <li>▪ Cut Length vs Total Length</li> </ul>
<b>P&amp;ID</b>	<ul style="list-style-type: none"> <li>▪ Navigating the Toolbox</li> <li>▪ Placing equipment, lines</li> <li>▪ In-Line Symbols</li> <li>▪ Flange Options for Valves</li> <li>▪ Small Valves vs Regular Valves</li> </ul>	<ul style="list-style-type: none"> <li>▪ Instrumentation</li> <li>▪ Annotations</li> <li>▪ Trim Lines</li> <li>▪ Auto Arrow</li> <li>▪ List generation</li> </ul>
<b>ORTHO</b>	<ul style="list-style-type: none"> <li>▪ Navigating the Toolbox</li> <li>▪ Double and Single Line Drafting</li> <li>▪ Scale Factors</li> <li>▪ Adding Equipment and Piping</li> </ul>	<ul style="list-style-type: none"> <li>▪ AutoRoute</li> <li>▪ Dimensioning</li> <li>▪ BOM generation</li> <li>▪ Resolving errors and making corrections</li> <li>▪ Overrides</li> </ul>
<b>ISOMETRIC</b>	<ul style="list-style-type: none"> <li>▪ Navigating the Toolbox</li> <li>▪ INFO blocks</li> <li>▪ Dimensional files</li> <li>▪ Changing Isoplanes</li> <li>▪ Adding Equipment and Piping</li> <li>▪ AutoRoute</li> <li>▪ Dimensioning (including Sub-Dimensioning, Offset, Rolled Offset)</li> </ul>	<ul style="list-style-type: none"> <li>▪ BOM generation</li> <li>▪ Special Items, Remove Items from BOM</li> <li>▪ Resolving errors and making corrections</li> <li>▪ Overrides</li> <li>▪ Supports</li> <li>▪ Steel</li> <li>▪ Annotations</li> </ul>

Application	Content	
<b>ELECTRIC</b>	<ul style="list-style-type: none"> <li>▪ Navigating the Toolbox</li> <li>▪ Single Line Diagrams</li> <li>▪ Schematic / Layout drawings</li> <li>▪ Placing equipment and Lines</li> </ul>	<ul style="list-style-type: none"> <li>▪ In-Line Symbols</li> <li>▪ Annotations</li> <li>▪ Lighting Schedules</li> <li>▪ Cable Trays</li> </ul>
<b>Setup Maintenance</b>	<ul style="list-style-type: none"> <li>▪ Changing AutoCAD versions</li> <li>▪ Proper update procedures</li> </ul>	<ul style="list-style-type: none"> <li>▪ File locations</li> <li>▪ 4K Monitor Support</li> </ul>
<b>License Manager</b>	<ul style="list-style-type: none"> <li>▪ License Activation</li> </ul>	<ul style="list-style-type: none"> <li>▪ License Return</li> </ul>