

## **ISOMETRIC Course Outline**

Application	Content	
Standards Manager	<ul> <li>Creating New Standards</li> <li>File Locations and Drawing Management</li> <li>Relationship with the Drawing Manager</li> </ul>	<ul> <li>Filtering Specifications</li> <li>Multiple Block Locations</li> <li>Layers and the AutoCAD Layer Manager</li> <li>Importing and Exporting Standards</li> </ul>
Spec Generator	<ul> <li>Creating New Specs</li> <li>General Parameters and Interconnection to Drafting applications and BOMs</li> <li>Importing and Export Specs</li> </ul>	<ul> <li>Customizing Material Information</li> <li>Customized Rating Display</li> <li>Branch Fittings Table</li> <li>Wall Thickness Table</li> </ul>
BOM Settings Manager	<ul><li>Updating data columns</li><li>Changing groups of components</li></ul>	<ul><li>Changing numbering</li><li>Sorting options</li><li>Cut Length vs Total Length</li></ul>
ISOMETRIC	<ul> <li>Navigating the Toolbox</li> <li>INFO blocks</li> <li>Dimensional files</li> <li>Changing Isoplanes</li> <li>Adding Equipment and Piping</li> <li>AutoRoute</li> <li>Dimensioning (including Sub-Dimensioning, Offset, Rolled Offset)</li> </ul>	<ul> <li>BOM generation</li> <li>Special Items, Remove Items from BOM</li> <li>Resolving errors and making corrections</li> <li>Overrides</li> <li>Supports</li> <li>Steel</li> <li>Annotations</li> </ul>
User Settings Manager	<ul><li>Changing AutoCAD versions</li><li>AutoCAD Profile</li></ul>	<ul><li>Snap/Grid Setting</li><li>4K Monitor Support (menu icon size)</li></ul>
Setup Maintenance	<ul> <li>Changing Program/Application Location</li> </ul>	Datafile path locations
License Manager	<ul> <li>License Activation</li> </ul>	■ License Return

## **NOTES:**